



MONTHLY CLEANING GUIDE



1 Empty all product from the hoppers before cleaning



2 Remove drip tray and cover



3 Unplug the hopper lamp cords and remove the hopper lids



4 Depress the hopper lock plunger (inset), lift slightly. Pull the hopper assembly forward and remove



5 Remove the auger nose bushing from inside the front of the hopper



6 Show the auger nose bushing to your friends who have gathered to watch you clean this machine



7 Pull the auger from the cooling drum



8 Remove the nose gasket from the shaft

NOTE
During assembly, lubricate the inside of the nose gasket.



9 Remove the hopper seal from the flange on the cooling drum



10 Spread one side of the handle first, then the other and disconnect from the hopper



11 Carefully slide valve up to remove spring and faucet seal. Extra care should be taken when handling the seal to prevent damage



12 Remove filter from rear of machine and clean thoroughly by running under warm water

WASH AND SANITIZE ALL PARTS BEFORE RE-ASSEMBLY FOR SERVICE ON THIS UNIT, PLEASE CALL (800) 238-2460